# Always there to help you

Register your product and get support at
www.philips.com/welcome

HTL9100

Question? Contact Philips

# User manual

PHILIPS

HTL9100_94_UM_EN.indd 2 5/8/2014 11:56:14 AM

# Contents


1 Important 2
Safety 2
Care for your product 3
Care of the environment 3
Compliance 3
Help and support 3

2 Your SoundBar 4
Indicators on the main unit 4
Remote control 5
Connectors 6
Wireless speakers 7
Wireless subwoofer 7

3 Connect and set up 8
Charge speakers 8
Pair up with speakers/subwoofer 8
Place speakers 9
Connect to TV 9
Connect digital devices through HDMI 10
Connect audio from TV and other devices 10

4 Use your SoundBar 11
Adjust the volume 11
Choose your sound 11
MP3 player 12
Play music via Bluetooth 13
Auto standby 13
Apply factory settings 13

5 Wall mount your SoundBar 14
Wall mount 14

6 Product specifications 14

7 Troubleshooting 15




HTL9100_94_UM_EN.indd 1 5/8/2014 11:56:14 AM

# 1 Important

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

## Safety

**Risk of electric shock or fire!**

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

**Risk of short circuit or fire!**

- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

**Risk of injury or damage to the SoundBar!**

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

**Risk of overheating!**

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

**Risk of contamination!**

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

**Risk of swallowing batteries!**

- The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of



HTL9100_94_UM_EN.indd 2 5/8/2014 11:56:15 AM

reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

This is CLASS II apparatus with double insulation, and no protective earth provided.

## Care for your product

Use only microfiber cloth to clean the product.

## Care of the environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.
Please act according to your local rules and do not dispose of your old products with your normal household waste.
Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## Compliance

CE 0560

This product complies with the radio interference requirements of the European Community.
Hereby, Philips Consumer Lifestyle, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www.philips.com/support.

## Help and support

Philips provides extensive online support. Visit our website at www.philips.com/support to:
- download the user manual and the quick start guide
- watch video tutorials (available only for selected models)
- find answers to frequently answered questions (FAQs)
- email us a question
- chat with our support representative.



HTL9100_94_UM_EN.indd 3 5/8/2014 11:56:16 AM

Follow the instructions on the website to select your language, and then enter your product model number.
Alternatively, you can contact Philips Consumer Care in your country. Before you contact Philips, note down the model number and serial number of your product. You can find this information on the back or bottom of your product.

# 2 Your SoundBar

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your SoundBar at www.philips.com/welcome.

## Indicators on the main unit

This section describes the information of the LED indicators on the main unit.

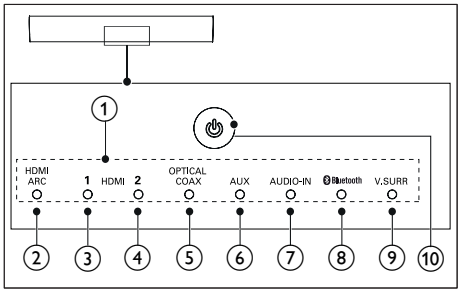


① **Volume indicator**

- When you change volume, one or multiple indicators (up to eight indicators) light up to indicate the volume level.

**Wireless pairing indicators**

- During wireless pairing between the main unit and the surround speakers, eight indicators blink one by one.
- When the pairing succeeds, eight indicators light up for three seconds.
- If the pairing fails, eight indicators blink three times.

② **HDMI ARC**

- Lights up when you select HDMI ARC as the input source.
- Blinks when no audio from the selected HDMI ARC source is detected, or when an unsupported audio format is detected.



HTL9100_94_UM_EN.indd 4 5/8/2014 11:56:16 AM

③ **HDMI 1**
Lights up when you select HDMI IN 1 as the input source.

④ **HDMI 2**
Lights up when you select HDMI IN 2 as the input source.

⑤ **OPTICAL/COAX**
- Lights up when you switch to optical or coaxial input source.
- Blinks when an unsupported audio format is detected.

⑥ **AUX**
Lights up when you switch to AUX input source.

⑦ **AUDIO-IN**
Lights up when you switch to AUDIO-IN source (3.5mm jack).

⑧ **Bluetooth**
- Lights up when you switch to Bluetooth mode and Bluetooth devices are paired.
- Blinks when you switch to Bluetooth mode and Bluetooth devices are not paired.

⑨ **V. SURR indicator**
- Lights up when surround mode is selected.
- Off when stereo mode is selected.
- Blinks once when night mode/auto volume is enabled.
- Blinks twice when Dolby Digital audio is input.
- Blinks twice when night mode/auto volume is disabled.
- Blinks three times when DTS audio is input.

⑩ **⏻ (Standby-On/Standby indicator)**
When the SoundBar is in standby, the standby indicator turns red.

## Remote control

This section includes an overview of the remote control.

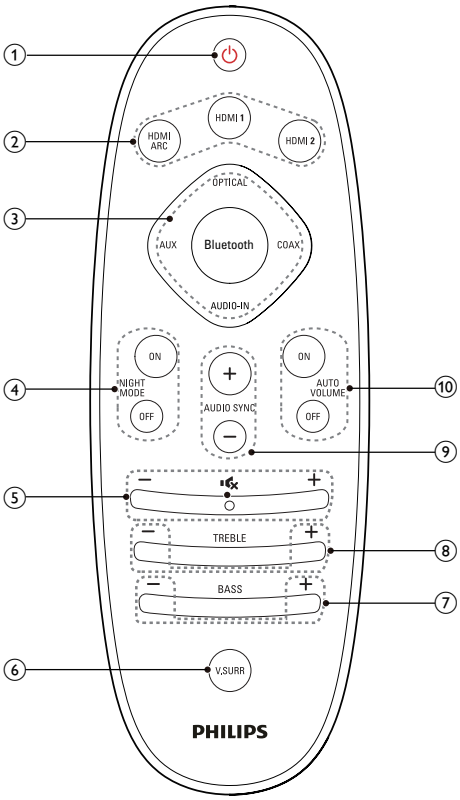


① **⏻ (Standby-On)**
- Switch the SoundBar on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

② **HDMI selection**
**HDMI ARC**: Switch your source to HDMI ARC connection.
**HDMI 1**: Switch your source to the HDMI IN 1 connection.



HTL9100_94_UM_EN.indd 5 5/8/2014 11:56:16 AM

**HDMI 2**: Switch your source to the HDMI IN 2 connection.

③ **Source buttons**
**OPTICAL**: Switch your audio source to the optical connection.
**COAX**: Switch your audio source to the coaxial connection.
**AUDIO-IN**: Switch your audio source to the AUDIO-In connection (3.5mm jack).
**AUX**: Switch your audio source to the AUX connection.
**Bluetooth**: Switch to Bluetooth mode.

④ **NIGHT MODE ON/OFF**
Turn night mode on or off.

⑤ **Volume control**
**+/-**: Increase or decrease volume.
: Mute or restore volume.

⑥ **V.SURR**
- Toggle between stereo and virtual surround sound.
- In HDMI-in mode (connected via **HDMI IN 1** or **HDMI IN 1**), press and hold to switch audio output through the SoundBar speaker or TV speaker.

⑦ **BASS +/-**
Increase or decrease bass.

⑧ **TREBLE +/-**
Increase or decrease treble.

⑨ **AUDIO SYNC +/-**
Increase or decrease audio delay.

⑩ **AUTO VOLUME ON/OFF**
Turn auto volume on or off.

## Connectors

This section includes an overview of the connectors available on your SoundBar.

### Rear connectors

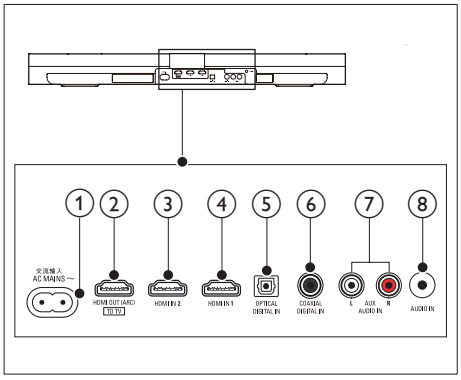


① **AC MAINS~**
Connect to the power supply.

② **TO TV-HDMI OUT (ARC)**
Connect to the HDMI (ARC) input on the TV.

③ **HDMI IN 2**
Connect to the HDMI output on a digital device.

④ **HDMI IN 1**
Connect to the HDMI output on a digital device.

⑤ **DIGITAL IN-OPTICAL**
Connect to an optical audio output on the TV or a digital device.

⑥ **DIGITAL IN-COAXIAL**
Connect to a coaxial audio output on the TV or a digital device.

⑦ **AUDIO IN-AUX**
Connect to an analog audio output on the TV or an analog device.

⑧ **AUDIO-IN**
Audio input from, for example, an MP3 player (3.5mm jack).



HTL9100_94_UM_EN.indd 6 5/8/2014 11:56:17 AM

## Wireless speakers

The SoundBar comes with 2 wireless surround speakers (left and right).

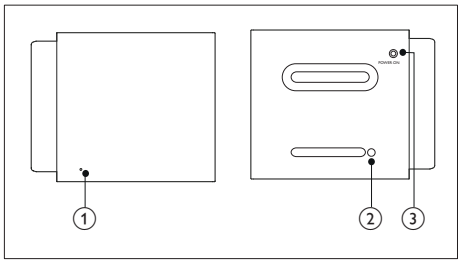


* The illustration above is for the right speaker's top view and bottom view.

① **Speaker indicator**
- During wireless pairing between the main unit and the speaker, the indicator blinks red quickly.
- When the pairing succeeds, the indicator turns into solid white (undocked from the main unit), or the indicator lights up white 30 seconds then fades off (being docked into the main unit).
- When the pairing fails or pairing remains undone, the indicator blinks red slowly.
- When the speaker is being charged (docked into the main unit), the indicator lights up amber.
- When the speaker goes to standby, the indicator blinks amber.

② **Connection key**
Press with a pin to enter the pairing mode for the speaker.

③ **POWER ON**
Press to turn on the wireless speaker if it automatically goes to standby.

## Wireless subwoofer

The SoundBar comes with a wireless subwoofer.

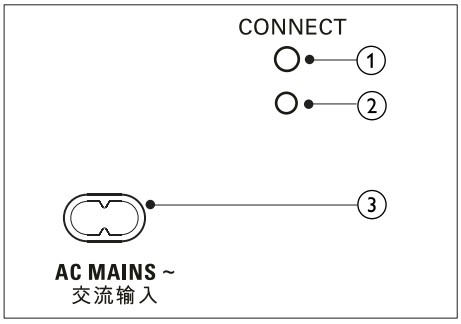


① **CONNECT**
Press to to enter the pairing mode for the subwoofer.

② **Subwoofer indicator**
- When the power is turned on, the indicator lights up.
- During wireless pairing between the subwoofer and the main unit, the indicator blinks white quickly.
- When the pairing succeeds, the indicator lights up white.
- When the pairing fails, the indicator blinks white slowly.

③ **AC MAINS~**
Connect to the power supply.



HTL9100_94_UM_EN.indd 7 5/8/2014 11:56:17 AM

# 3 Connect and set up

This section helps you connect your SoundBar to a TV and other devices, and then set it up. For information about the basic connections of your SoundBar and accessories, see the quick start guide.

**Note**

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

## Charge speakers

If the wireless surround speaker is undocked from the main unit, its battery level is indicated by the indicator on the speaker.

- Light up white: full battery
- Light up red: low battery level (less than 30% remaining)
- Flash red: near empty (less than 10% remaining)

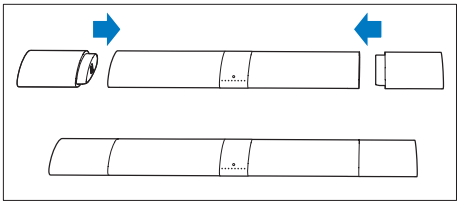

1. Dock your speakers onto the main unit to charge the speakers.
2. Turn on the main unit.
   - ↳ During charging, the indicator on the speaker lights up amber.
   - ↳ When fully charged, the indicator on the speaker lights up white for 30 seconds.

**Note**

- It may take around 2 hours to fully charge the speakers.
- If the charging lasts more than 4 hours during standby of the main unit, the speakers automatically switch to standby.

## Pair up with speakers/ subwoofer

The wireless speakers and subwoofer automatically pair up with the SoundBar for wireless connection when you turn on the SoundBar, the speakers and the subwoofer. If no audio from the wireless speakers and subwoofer can be heard, manually pair up the speakers and the subwoofer.

### Pair up with the speakers

1. Turn on the SoundBar and the surround speaker.
   - ↳ If the connection to the SoundBar is lost, the indicator on the speaker blinks red slowly.
2. Press the **Connection key** on the speaker with a pin to enter the pairing mode.
   - ↳ The indicator on the speaker blinks red quickly.
3. On the remote control, press **AUX**, and then press **TREBLE -**, **BASS +** and **+** (**Volume**) within three seconds.
   - ↳ If the pairing succeeds, the indicator on the speaker lights up white (undocked from the main unit), or the indicator on the speaker lights up white for 30 seconds (being docked into the main unit).
   - ↳ If the pairing fails, the indicator on the speaker blinks red slowly.
4. If the pairing fails, repeat the steps above.
5. Repeat the steps above to pair up the other surround speaker with the main unit.



HTL9100_94_UM_EN.indd 8 5/8/2014 11:56:18 AM

### Pair up with the subwoofer

1 Turn on the SoundBar and the subwoofer.
   ↳ If the connection to the SoundBar is lost, the indicator on the subwoofer blinks white slowly.

2 Press the **CONNECT** button on the subwoofer to enter the pairing mode.
   ↳ The indicator on the subwoofer blinks white quickly.

3 On the remote control, press **AUX**, and then press **TREBLE -**, **BASS +** and **+** (**Volume**) within three seconds.
   ↳ If the pairing succeeds, the indicator on the subwoofer lights up white.
   ↳ If the pairing fails, the indicator on the subwoofer blinks white slowly.

4 If the pairing fails, repeat the steps above.

## Place speakers

For best sound effect, position all the speakers towards the seating position and place them close to your ear level (seated).

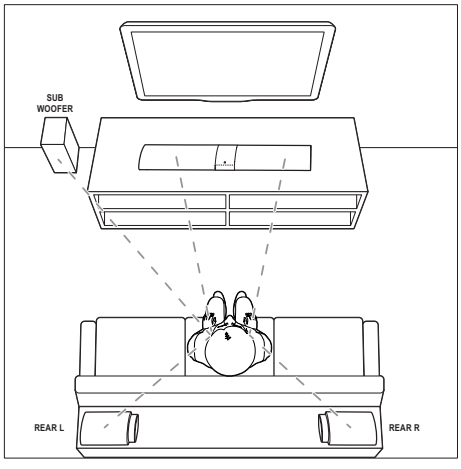


Note

- Surround sound depends on factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics. Experiment with the speaker positions to find the optimum setting for you.

Follow these general guidelines for speakers placement.

1 Seating position:
This is the center of your listening area.

2 Place the SoundBar in front of the seating position.

3 **REAR L** (rear left) and **REAR R** (rear right) surround speakers:
Place the rear surround speakers to the left and right side of your seating position, either in line with it or slightly behind it.

4 **SUBWOOFER** (subwoofer):
Place the subwoofer at least one meter to the left or right of the TV. Leave about 10-centimeter clearance from the wall.

### Dock the surround speakers

You can also dock your surround speakers onto the main unit to listen to audio, for example, watching TV shows and news.

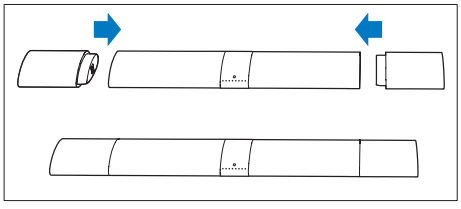

## Connect to TV

Connect your SoundBar to a TV. You can listen to audio from TV programs through your SoundBar. Use the best quality connection available on your SoundBar and TV.



HTL9100_94_UM_EN.indd 9 5/8/2014 11:56:18 AM

### Connect to TV through HDMI (ARC)

Your SoundBar supports HDMI with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, you can hear the TV audio through your SoundBar by using a single HDMI cable.

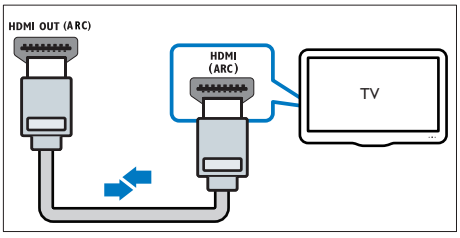


1 Using a High Speed HDMI cable, connect the **HDMI OUT (ARC)** connector on your SoundBar to the **HDMI ARC** connector on the TV.
   - The **HDMI ARC** connector on the TV might be labeled differently. For details, see the TV user manual.

2 On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.

**Note**

- If your TV is not HDMI ARC compliant, connect an audio cable to hear the TV audio through your SoundBar. (see 'Connect audio from TV and other devices' on page 10)
- If your TV has a DVI connector, you can use an HDMI/DVI adapter to connect to TV. However, some of the features may not be available.

## Connect digital devices through HDMI

Connect a digital device such as a set-top box, DVD/Blu-ray player, or games console to your SoundBar through a single HDMI connection. When you connect the devices in this way and play a file or game, the

- video is automatically displayed on your TV, and
- audio is automatically played on your SoundBar.

1 Using a High Speed HDMI cable, connect the **HDMI OUT** connector on your digital device to the **HDMI IN 1/2** on your SoundBar.

2 Connect your SoundBar to TV through **HDMI OUT (ARC)**.
   - If the TV is not HDMI CEC compliant, select the correct video input on your TV.

3 On the connected device, turn on HDMI-CEC operations. For details, see the user manual of the device.

## Connect audio from TV and other devices

Play audio from TV or other devices through your Soundbar speakers.
Use the best quality connection available on your TV, Soundbar, and other devices.

**Note**

- When your Soundbar and TV are connected through HDMI ARC, an audio connection is not required.

### Option 1: Connect audio through a digital optical cable

**Best quality audio**

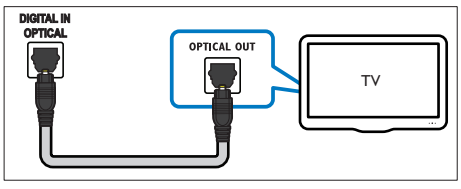




HTL9100_94_UM_EN.indd 10 5/8/2014 11:56:19 AM

1 Using an optical cable, connect the **OPTICAL** connector on your SoundBar to the **OPTICAL OUT** connector on the TV or other device.
   - The digital optical connector might be labeled **SPDIF** or **SPDIF OUT**.

### Option 2: Connect audio through a digital coaxial cable

**Good quality audio**

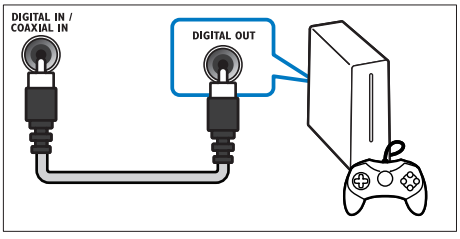


1 Using a coaxial cable, connect the **COAXIAL** connector on your SoundBar to the **COAXIAL/DIGITAL OUT** connector on the TV or other device.
   - The digital coaxial connector might be labeled **DIGITAL AUDIO OUT**.

### Option 3: Connect audio through analog audio cables

**Basic quality audio**

1 Using an analog cable, connect the **AUX** connectors on your SoundBar to the **AUDIO OUT** connectors on the TV or other device.

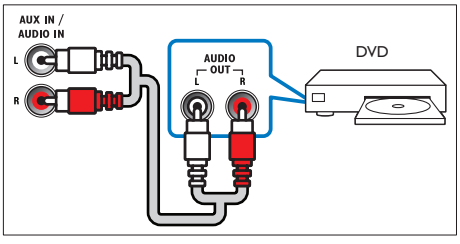


# 4 Use your SoundBar

This section helps you use the SoundBar to play audio from connected devices.

**Before you start**

- Make the necessary connections described in the quick start guide and the user manual.
- Switch the SoundBar to the correct source for other devices.

## Adjust the volume

1 Press **+/-** (**Volume**) to increase or decrease a volume level.
   - To mute sound, press (**Mute**).
   - To restore the sound, press (**Mute**) again or press **+/-** (**Volume**).

**Volume indicator**

- When you change volume, one or multiple **Volume indicator** (up to 8 indicators) on the main unit light up to indicate a volume level. The more indicators light up, the higher the volume level is.




- If you do not press the volume key for five seconds, the volume indicators light off, and the current source indicator and the sound mode indicator light up.

## Choose your sound

This section helps you choose the ideal sound for your video or music.



HTL9100_94_UM_EN.indd 11 5/8/2014 11:56:19 AM

## Surround sound mode

Experience an immersive audio experience with surround sound modes.

1 Press **V.SURR** to select a surround mode.
- **Surround**: Creates a surround listening experience. The **V.SURR** indicator on the main unit lights up.
- **Stereo**: Two-channel stereo sound. Ideal for listening to music.

## Equalizer

Change the high frequency (treble) and low frequency (bass) settings of the SoundBar.

1 Press **TREBLE +/-** or **BASS +/-** to change the frequency.

### Treble/bass indicator

- When you change frequency levels, one or multiple indicator (up to 8 indicators) on the main unit light up to indicate a frequency level. The more indicators light up, the more the treble or bass is.




## Auto volume

Turn the auto volume on to keep the volume constant when you switch to a different source. It also compresses the sound dynamics, increasing the volume for quiet scenes and decreasing the volume for loud scenes.

1 Press **AUTO VOLUME ON/OFF** to turn auto volume on or off.
- ↳ When auto volume is turned on, the **V.SURR** indicator blinks once.
- ↳ When auto volume is turned off, the **V.SURR** indicator blinks twice.

## Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

1 Press **AUDIO SYNC +/-** to synchronize the audio with the video.
- **AUDIO SYNC +** increases the sound delay, and **AUDIO SYNC -** decreases the sound delay.
- ↳ When you change the value of sound delay, the more value/delay you set, the more indicators on the main unit light up.

## Night mode

For quiet listening, decrease the volume of loud sounds when audio is played. Night mode is only available for Dolby Digital soundtracks.

1 Press **NIGHT MODE ON/OFF** to turn night mode on or off.
- ↳ When night mode is turned on, the **V.SURR** indicator blinks once.
- ↳ When night mode is turned off, the **V.SURR** indicator blinks twice.

**Note**

- If auto volume is set to turned on, you cannot enable the night mode.

# MP3 player

Connect your MP3 player to play your audio files or music.

### What you need

- An MP3 player.
- A 3.5mm stereo audio cable.

1 Using the 3.5mm stereo audio cable, connect the MP3 player to the **AUDIO-IN** connector on your SoundBar.

2 Press **AUDIO-IN**.



HTL9100_94_UM_EN.indd 12 5/8/2014 11:56:20 AM

3 Press the buttons on the MP3 player to select and play audio files or music.
- On the MP3 player, it is recommended to set the volume in the range of 80% maximum volume.

## Play music via Bluetooth

Through Bluetooth, connect the SoundBar with your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your SoundBar speakers.

**What you need**
- A Bluetooth device which supports Bluetooth profile A2DP, and with Bluetooth version as 2.1 + EDR.
- The operational range between the SoundBar and a Bluetooth device is approximately 10 meters (30 feet).

1 Press **Bluetooth** on the remote control to switch the SoundBar to Bluetooth mode.
↳ The **Bluetooth** indicator blinks.

2 On the Bluetooth device, switch on Bluetooth, search for and select **Philips HTL9100** to start connection (see the user manual of the Bluetooth device on how to enable Bluetooth).
↳ During connection, the **Bluetooth** indicator blinks.

3 Wait until you hear a beep sound from the SoundBar.
↳ The **Bluetooth** indicator lights up.
↳ If the connection fails, the **Bluetooth** indicator blinks continually.

4 Select and play audio files or music on your Bluetooth device.
- During play, if a call is coming, music play is paused. Play resumes when the call ends.
- If music streaming is interrupted, place the Bluetooth device closer to the Soundbar.

5 To exit Bluetooth, select other source.
- When your switch back to Bluetooth mode, Bluetooth connection remains active.

**Note**

- The music streaming may be interrupted by obstacles between the device and SoundBar, such as wall, metallic casing that covers the device, or other devices nearby that operate in the same frequency.
- If you want to connect your SoundBar with another Bluetooth device, disable the currently connected Bluetooth device.
- Philips does not guarantee 100% compatibility with all Bluetooth devices.

## Auto standby

When playing media from a connected device, the SoundBar automatically switches to standby if:
- no button is pressed for 30 minutes, and
- no audio/video playback is detected from a connected device.

## Apply factory settings

You can reset your SoundBar to the default settings programmed at the factory.

1 In AUX mode, press and hold **NIGHT MODE OFF** for 5 seconds.
↳ When the factory settings restore is complete, the SoundBar automatically switches off and restarts.



HTL9100_94_UM_EN.indd 13 5/8/2014 11:56:20 AM

# 5 Wall mount your SoundBar

Before you mount your SoundBar on the wall, read all safety precautions. (see 'Safety' on page 2)

## Wall mount

Note

- You must detach the surround speakers from the main unit before wall mounting or un-mounting.
- Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage. If you have any query, contact Philips Consumer Care in your country.
- Secure the wall mount to a wall that can support the combined weight of the product and the wall mount.
- Before wall mount, you need not remove the four rubber feet at the bottom of the soundbar, otherwise the rubber feet cannot be fixed back.

**Screw length/diameter**

Depend on the type of wall mounting this wall mount bracket, make sure that you use screws of a suitable length and diameter.

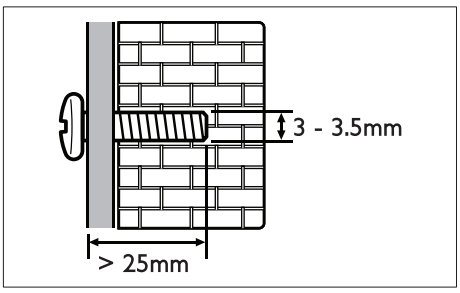


For information about how to wall your SoundBar, see the wall mount guide.

# 6 Product specifications

Note

- Specifications and design are subject to change without notice.

## Amplifier

- Total output power:
  210W RMS (+/- 0.5 dB, 30% THD) /
  168W RMS (+/- 0.5 dB, 10% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio:
  > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX: 400 mV
  - AUDIO-IN: 220 mV

## Audio

- S/PDIF Digital audio input:
  - Coaxial: IEC 60958-3
  - Optical: TOSLINK

## Bluetooth

- Bluetooth profiles: A2DP
- Bluetooth version: 2.1 + EDR

## Main unit

- Power supply: 110-240 V~, 50/60 Hz
- Power consumption: 50 W
- Standby power consumption: ≤ 0.5 W
- Speaker impedance:
  - Woofer: 8 ohm
  - tweeter: 8 ohm
- Speaker drivers: 2 x 63.5 mm (2.5") woofer + 2 x 25.4 mm (1") tweeter
- Dimensions (WxHxD):
  1035 x 73 x 156 mm (with 2 surround speakers attached)
- Weight: 3.9 kg



HTL9100_94_UM_EN.indd 14 5/8/2014 11:56:20 AM

## Surround speakers

- Speaker impedance: 8 ohm
- Speaker drivers: 2 x 63.5 mm (2.5") full range
- Dimensions (WxHxD): 191 x 73 x 156 mm
- Weight: 0.7 kg/each

## Subwoofer

- Power supply: 110-240 V~, 50/60 Hz
- Power consumption: 30 W
- Standby power consumption: ≤ 0.5 W
- Impedance: 4 ohm
- Speaker drivers: 1 x 165 mm (6.5") woofer
- Dimensions (WxHxD): 200 x 510 x 201 mm
- Weight: 4.9 kg

## Wall mount

- Dimensions (WxHxD): 40 x 100 x 26.5 mm
- Weight: 0.1 kg/each

## Remote control batteries

- 2 x AAA-R03-1.5 V

# 7 Troubleshooting

**Warning**

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.
If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www.philips.com/support.

## Main unit

**The buttons on the SoundBar do not work.**

- Disconnect the SoundBar from the power supply for a few minutes, then reconnect.

## Sound

**No sound from SoundBar speakers.**

- Connect the audio cable from your SoundBar to your TV or other devices. However, you do not need a separate audio connection when:
  - the SoundBar and TV are connected through **HDMI ARC** connection, or
  - a device is connected to the **HDMI IN** connector on your SoundBar.
- Reset your SoundBar to its factory settings.
- On the remote control, select the correct audio input.
- Make sure that the SoundBar is not muted.

**No sound from the wireless surround speakers.**

- Wirelessly connect the speakers to the main unit (see 'Pair up with the speakers' on page 8).
- Dock the wireless surround speakers into the main unit to charge the battery.



HTL9100_94_UM_EN.indd 15 5/8/2014 11:56:20 AM

No sound from the wireless subwoofer.

- Wirelessly connect the subwoofer to the main unit (see 'Pair up with the subwoofer' on page 9).

Distorted sound or echo.

- If you play audio from the TV through the SoundBar, make sure that the TV is muted.

Audio and video are not synchronized.

- Press **AUDIO SYNC +/-** to synchronize the audio with the video.

## Bluetooth

A device cannot connect with the SoundBar.

- The device does not support the compatible profiles required for the SoundBar.
- You have not enabled the Bluetooth function of the device. See the user manual of the device on how to enable the function.
- The device is not correctly connected. Connect the device correctly.
- The SoundBar is already connected with another Bluetooth device. Disconnect the connected device, then try again.

Quality of audio play from a connected Bluetooth device is poor.

- The Bluetooth reception is poor. Move the device closer to the SoundBar, or remove any obstacle between the device and the SoundBar.

The connected Bluetooth device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to the SoundBar, or remove any obstacle between the device and the SoundBar.
- Turn off Wi-Fi function on the Bluetooth device to avoid interference.
- For some Bluetooth, the Bluetooth connection can be deactivated automatically to save power. This does not indicate any malfunction of the SoundBar.



HTL9100_94_UM_EN.indd 16 5/8/2014 11:56:20 AM

## WARRANTY

This product is covered under warranty against any defect arising out of faulty or defective material or workmanship for a period of 12 Months from the date of purchase.

Should a defect develop during the period of warranty, WOOX Innovations India Private Limited undertakes to repair this product free of charge through an Authorised Philips service centre. If the purchaser shifts his residence to other town, the warranty will be valid at the nearest Authorised Philips service center.

**The Warranty is not valid in case:**

- Proof of purchase is not accompanied with this warranty form
- This warranty form is not completed immediately after purchase
- This product is not used according to this manual
- Defects are caused by improper or reckless use
- Any repair work are done by person other than Authorised Philips service center
- Any modification or alteration of any nature are made in the apparatus
- The serial number is tampered
- Defects due to causes beyond control like lightning, abnormal voltage, Acts of God or while in transit to the purchaser's residence

*Maintenance Tips for this product:*

- Always keep a Disc loaded in this product tray.
- Keep this product from the dusty areas. Keep it covered with a dust cover.
- Clean this product Lens after every 20 Discs played.
  - Use the 2 brush Philips DVD Lens Cleaner SVC2520 for best results.
- Clean the CDs / VCD / DVD / MP3 CD before inserting in this product.

## WOOX Innovations India Private Limited

**Registered office: 9th Floor, DLF 9 –B, DLF Cyber City, DLF Phase – 3, Gurgaon – 122 002, India**

*For Any Sales & Service Enquiry:*

Email us at customercare.india@philips.com

Call us on Tel No. 1800-102-2929 (toll free)
1860-180-1111*
0124-429-1111*
* Standard Call rates apply

***Pls fill the following for your reference and warranty validity:-***

- Serial No:_____
- Bill No. & Date of Purchase:_____
- Purchaser's Name:_____
- Location & Tel No.:_____
- Dealer's Name:_____
- Location & Tel No:_____

- Dealer's Stamp & Sign:_____



HTL9100_94_UM_EN.indd 17 5/8/2014 11:56:21 AM

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V. All rights reserved.
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

HTL9100_94_UM_V1.0